




SCAN2LEAD

COLLECT

Quick Guide



Scan your visitor's badge

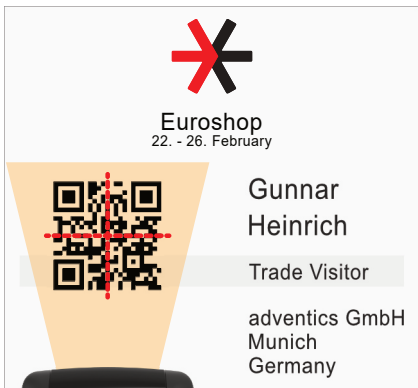

Press and hold the SCAN button to scan your visitor's badge



Your scan is successful if the green led lights up and the scanner vibrates

Wake up your collector



Scan2Lead COLLECT switches to sleep mode after 60 minutes when not being used



Press and hold the SCAN button for 5 seconds, to wake up your collector



support@scan2lead.com



+49 89 4444 33 112



<https://support.scan2lead.com>





COLLECT

Quick Guide

SCAN2LEAD




Upload data from Collector



- ✓ Visit <https://COLLECTOR.scan2lead.com>
- ✓ Scan the displayed QR code and click continue
- ✓ For the next steps, follow the instructions on your screen

Get visitor data from Portal

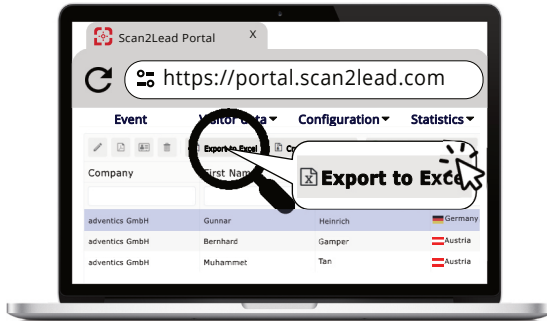

- ✓ Visit <https://PORTAL.scan2lead.com>
- ✓ Your order included an e-mail with a portal key
- ✓ Use this portal key to register an account and export your data

! Access to the PORTAL will close 8 weeks after the event



support@scan2lead.com



+49 89 4444 33 112



<https://support.scan2lead.com>

